

## SRS VIDEO PHONE & GATE CIRCUIT BOARD FOR GATE RELEASE (L+ L- LOCK OUTPUT)

1. Run your twin core cable from the video phone as shown. (Door release connections) to the low voltage terminal strip marked Com. and Start on the gate controller.
2. **DO NOT CONNECT R2 TO L-, OR L+ TO TERMINAL 9 (Lock Timer), AS SUGGESTED IN THE MAIN DIAGRAM WHEN USING THE RELEASE FOR POWERED GATES. WIRE ONLY AS SHOWN BELOW**
3. Test the system by pressing the door release button on the phone

